

S13824 - 4 Station Easel (DT-631)

Assembly Instructions

Frame Assembly Instructions

1. Place the two end panels and two side panels upside down on a work surface as shown.
2. Fasten the four pieces together with the bolt (D), washer (E), and nut (F) as shown in the assembly diagram.


NOTE: The square portion of the bolt will pull down into the round hole when tightened.

Parts List




A (2) End Panels w/ casters



B (2) Side Panels

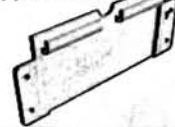


C (1) 4 sided Easel Cube

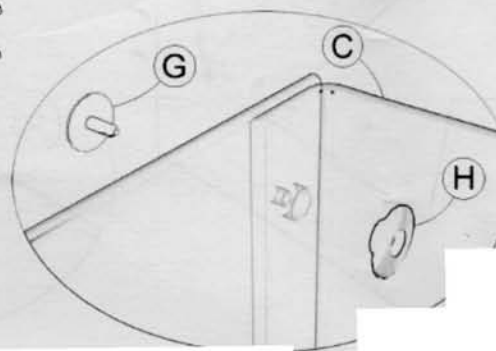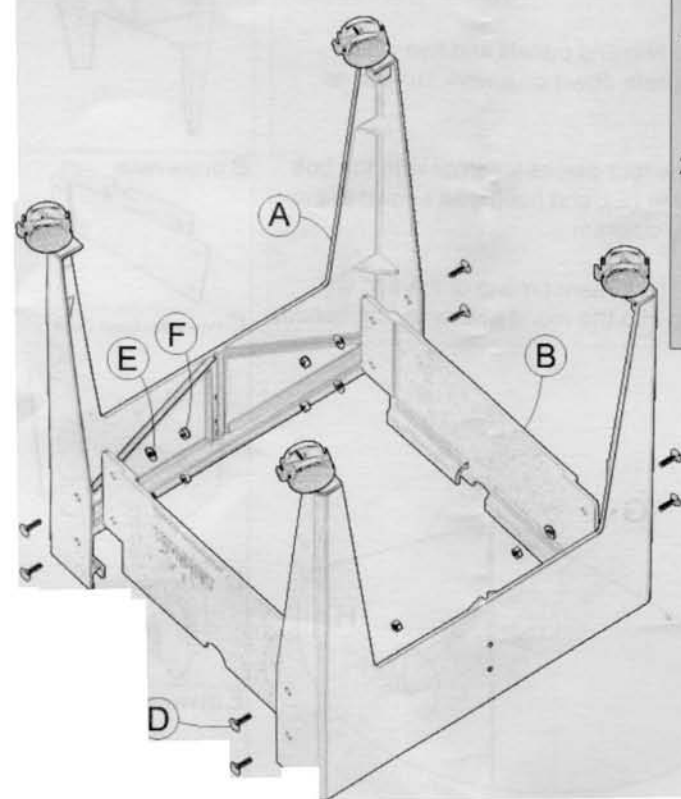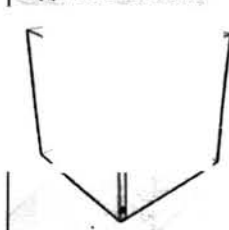

Cube Assembly Instructions

1. Remove the protective film from the Easel Cube.
2. Rest the four sided cube on a flat work surface with either opening facing up.
3. Insert the female snap button (H) into the larger hole from the side that is inside the cube.
4. Insert the male snap button (G) into the smaller hole from the outside of the cube until it snaps into the female snap button (H).
5. Do steps 1-3 for the remaining two hole locations.

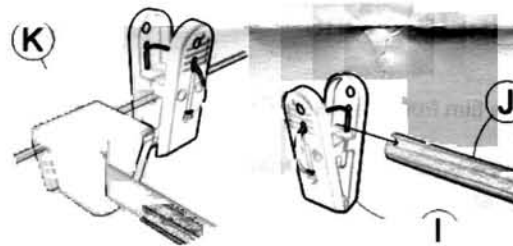

F (8) Nuts



G (3) Male Snap Buttons



 
H (3) Female Snap Buttons



I (16) Easel Clips




J (2) Hanging Rods



K (4) Hanging Rod Hangers



L (4) Super Caddies

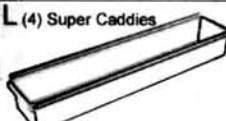

Final Assembly Instructions

1. Set frame assembly upright on casters.
2. Place Easel Cube into the channel of the frame. Make sure the rounded edge of the Easel Cube is on top.
3. Place the Super Caddies into the channel of the frame.
4. Finish off by clipping the Easel Clips on the top of the Easel Cube, and over the wood hanging rods.

